

## Operating Instructions for: Psilosybe

Relive the sounds of the past with the Psilosybe Phase Shifter. Everything from 60's psychedelic and 70's funk to the classic Eddie sounds of the 80's.

Input-Instrument in. Unplug when not in use to conserve battery life.

Out-Output to amp

-9VDC jack-for use with -(Negative) center, 9VDC, filtered, and regulated power supply.

Regen (control)-Adjust to determine the rate of modulation of the Phase Shifter effect.

Speed (control)-Adjust the amount of wet or phase shifted signal applied to the output.

Shift 1 Toggle-Functions as an EQ/Filter. Switch to change between a rich full sound and a tighter sound with less low end emphasis.

Shift 2 Toggle-Alters the speed and wave form of the pitch shifter. Switch between classic phase shifter and a faster vibrato like effect.

On/Off-Footswitchable on/off.